




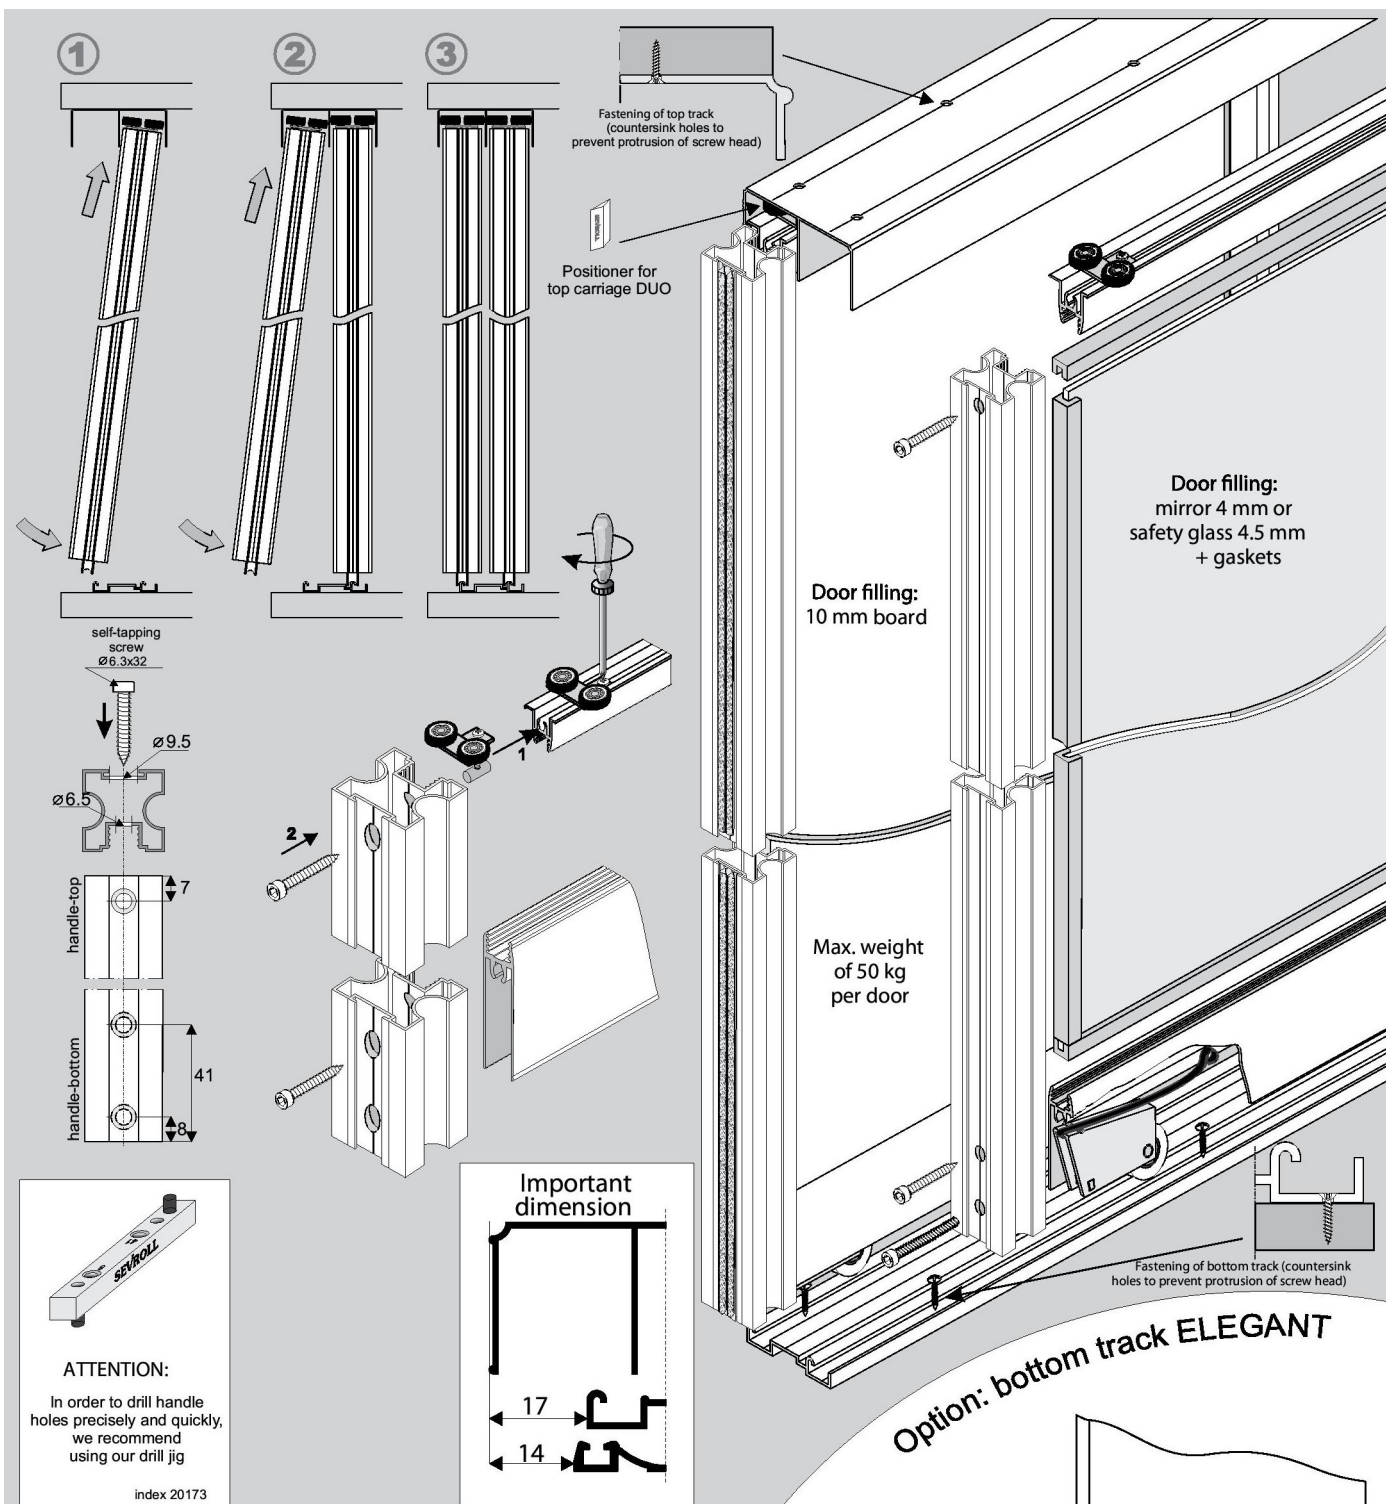


COMPONENTS

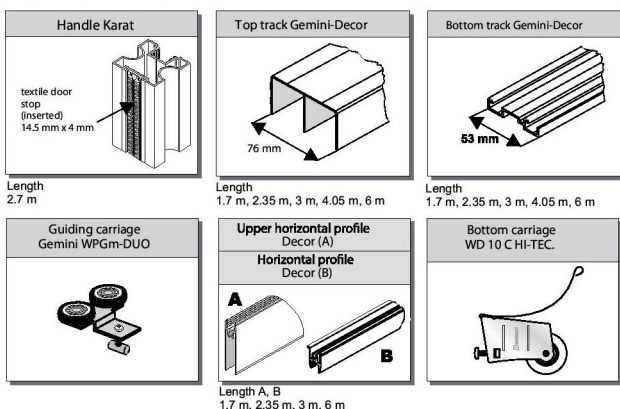

You must remember to purchase self-tapping screws to construct each door (4 screws per door). When using mirror or safety glass, you must also remember to purchase gaskets.

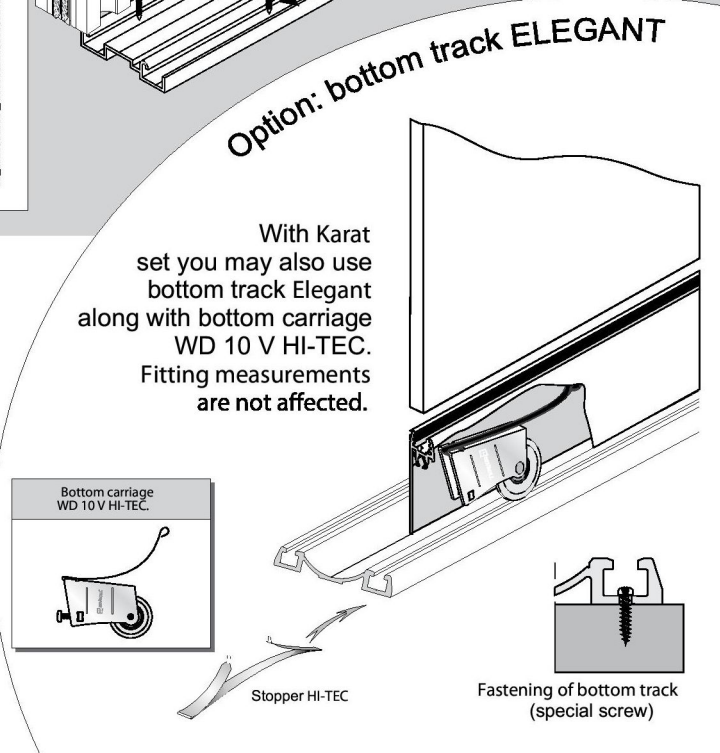

Dimensions of opening

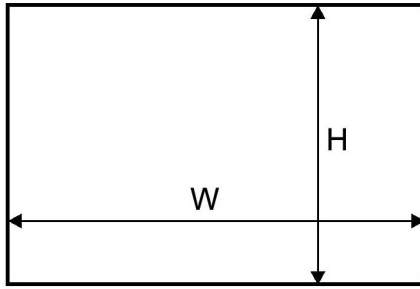

handle length = door height

door filling - # 10 mm board, # 4 mm mirror
or # 4.5 mm safety glass


door height - h	$h = H - 38 \text{ mm}$
board height - hb	$hb = h - 64 \text{ mm}$
door width - w	$w = (W - 3 + Z) : N$
board width - wb	$wb = w - 41 \text{ mm}$
horizontal profile length - L upper horizontal profile length - U	$L = U = w - 58 \text{ mm}$
mirror height - hm	$hm = hb$
mirror width - wm	$wm = wb - 4 \text{ mm}$

number of doors - N	2	3
total overlap - Z	30 mm	60 mm


visual design - 4 wings	
	$w = (W + 87) : 4$
	$w = (W : 2 + 27) : 2$

Installation method for fitting 10 mm board (diag. A)
and 4 mm mirror or glass (diag. B)

- with handle


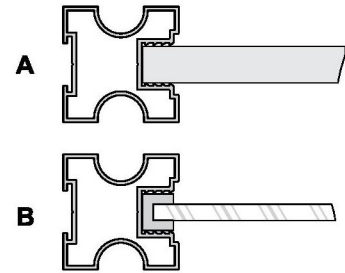


- with upper profile

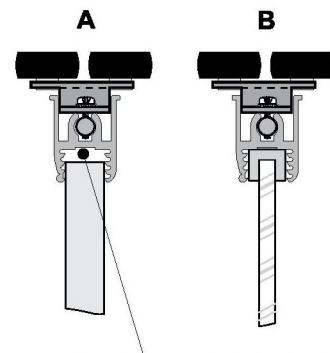

construction clearance included in the
calculation of the height of board

- with lower profile

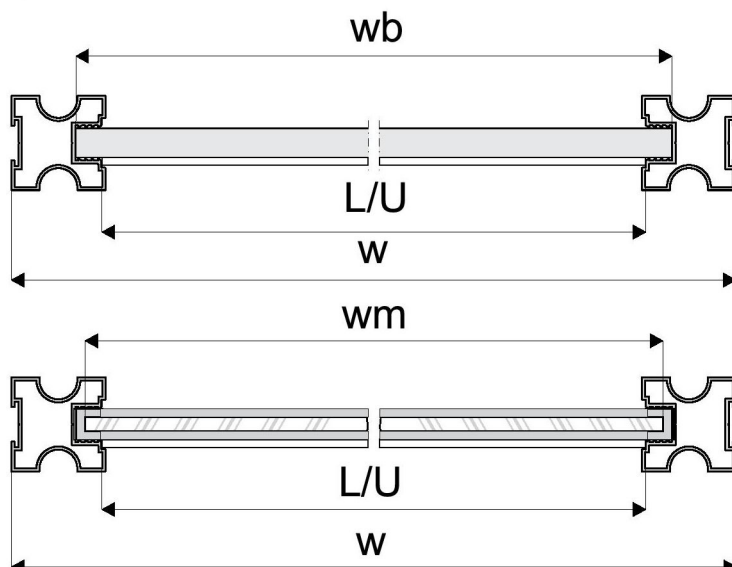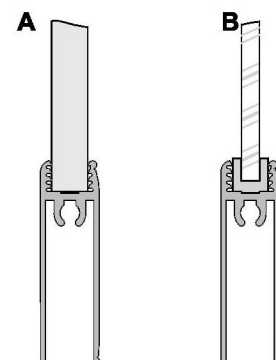

ATTENTION!

Mirror (4mm) should be used with a safety
backing film. Safety glass (4.5mm) comprises
of two thin layers with a film in-between.
Both mirror and glass need fitting gaskets.